HOME
DECORATORS
COLLECTION

BF-25337 RIDGEMORE MIRROR 30"Hx24"Wx6.5"D

INV#30630

ASSEMBLY INSTRUCTIONS

Made In China

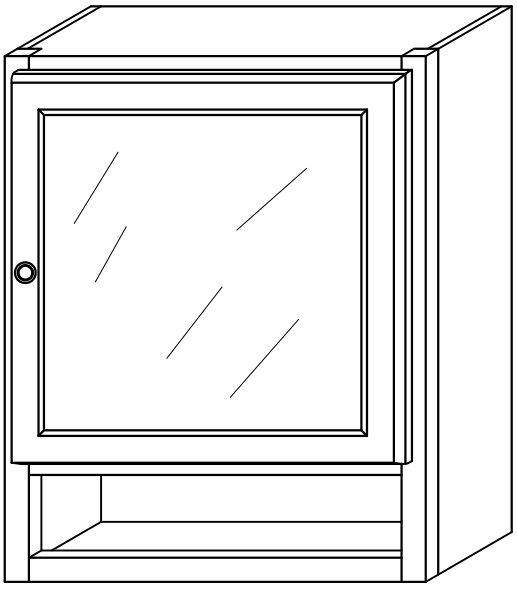

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have came loose inside the carton during shipment.Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Custormer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

STRUCTURAL DIAGRAM

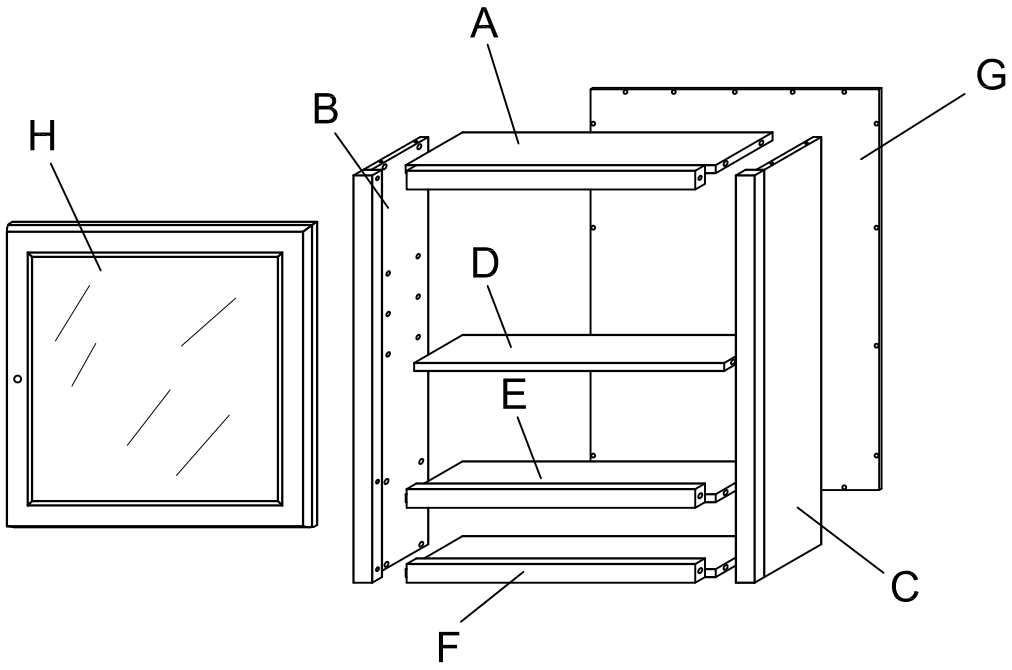

PARTS LIST

A  TOP PANEL-1PC	B LEFT SIDE PANEL-1PC	C  RIGHT SIDE PANEL-1PC	D  SHELF-1PC
E  ACROSS PANEL-1PC	F  BOTTOM PANEL-1PC	G 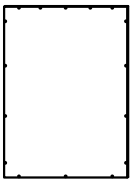 BACK PANEL-1PC	H 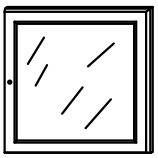 DOOR-1PC
I CAM-TOOL-1PC	J 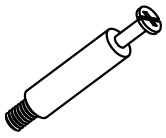 CAM-BOLTS-12PCS	K CAM-LOCKS-12PCS	L 7mm × 5/8"  SCREWS-11PCS
M 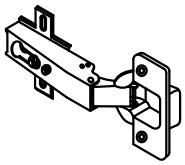 HINGES-2PCS	N 7mm × 5/8"  SCREWS-8PCS	O  HANDLE-1PC	P 8mm × 1/2"  SCREW-1PC
Q SHELF SUPPORTS-4PCS	R EVA MATS-2PCS	S 6mm × 3/4"  SCREWS-5PCS	T  SHEETIRONS-2PCS

U 7mm × 7/8"  SCREWS-5PCS	V GECKOS-5PCS	W DOWELS-6PCS	X CAM-LOCKS CAPS-4PCS

NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

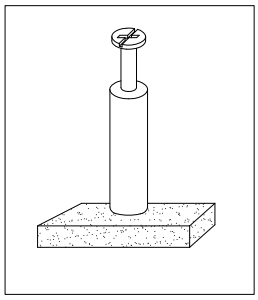

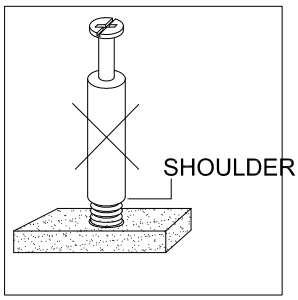

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

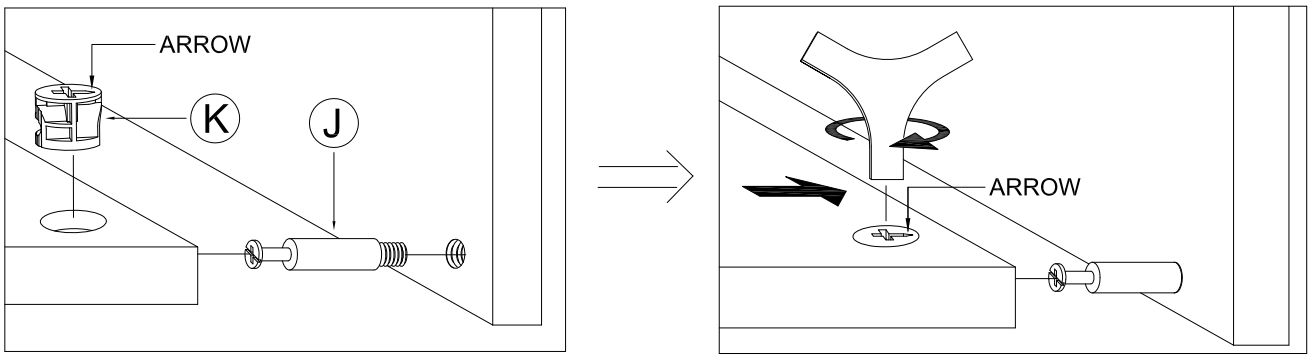

NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

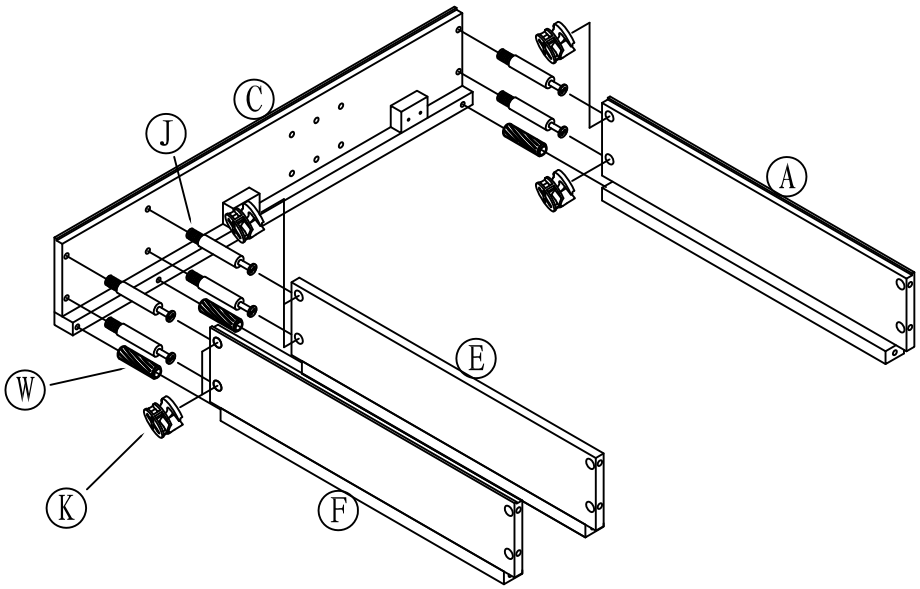

1). ASSEMBLE THE RIGHT SIDE PANEL(C).

- ROTATE 6 CAM-BOLTS(J) AND INSERT 3 DOWELS(W) INTO THE HOLES IN THE RIGHT SIDE PANEL(C).
- PLACE THE CAM-BOLTS(J) INTO THE HOLES IN THE PANEL(A/E/F) AND ATTACH USING 6 CAM-LOCKS(K).

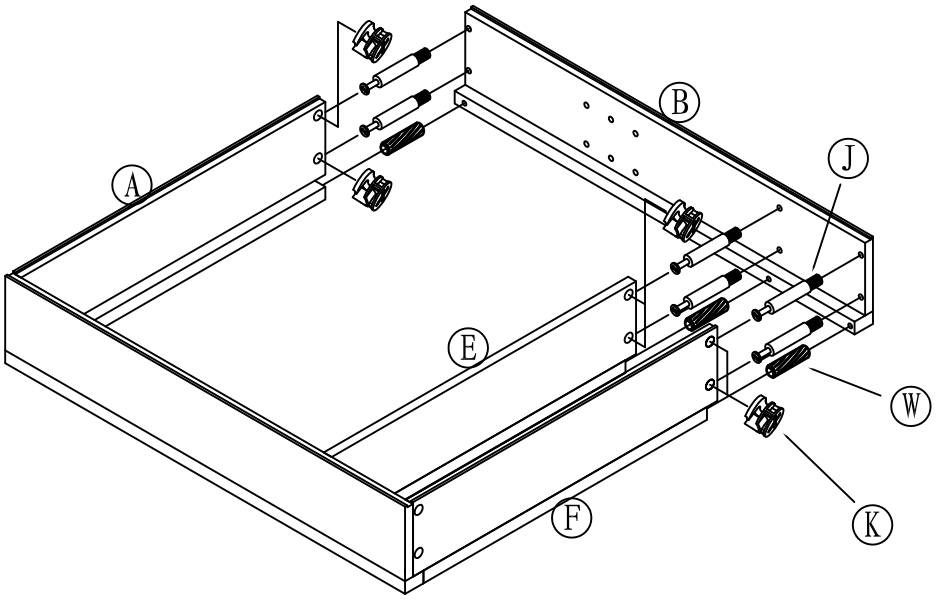

2). ASSEMBLE THE LEFT SIDE PANEL(B).

- ROTATE 6 CAM-BOLTS(J) AND INSERT 3 DOWELS(W) INTO THE HOLES IN THE LEFT SIDE PANEL(B).
- PLACE THE CAM-BOLTS(J) INTO THE HOLES IN THE PANEL(A/E/F) AND ATTACH USING 6 CAM-LOCKS(K).

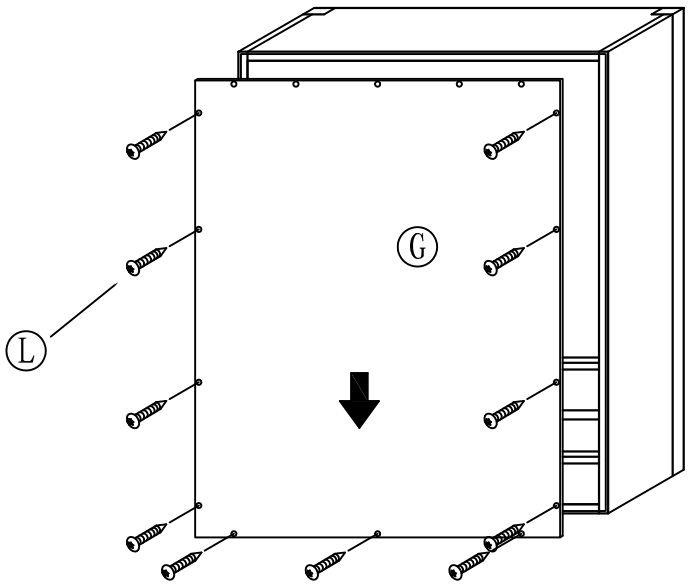

3). ASSEMBLE THE BACK PANEL(G).

- ATTACH THE BACK PANEL(G) USING 11 SCREWS(L).

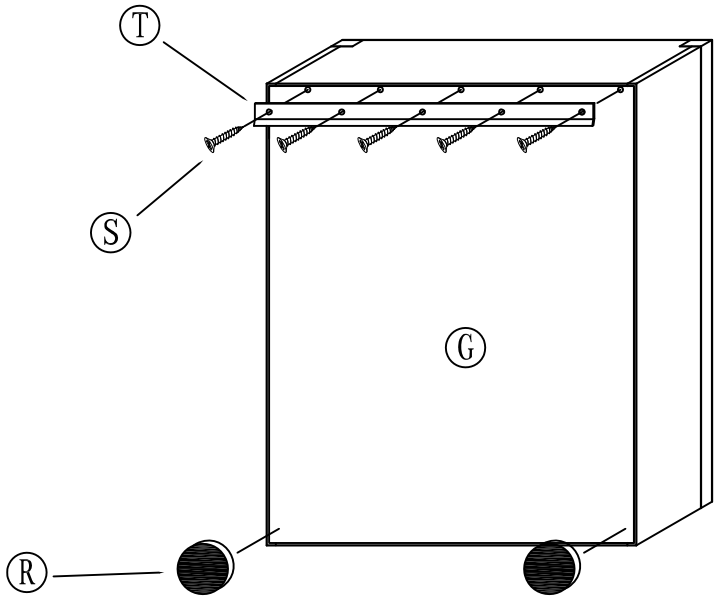

4). ASSEMBLE THE SHEETIRON(T).

- ATTACH THE SHEETIRON(T) TO BACK PANEL(G) USING 5 SCREWS(S).
- ATTACH 2 EVA MATS(R) TO BACK PANEL(G).

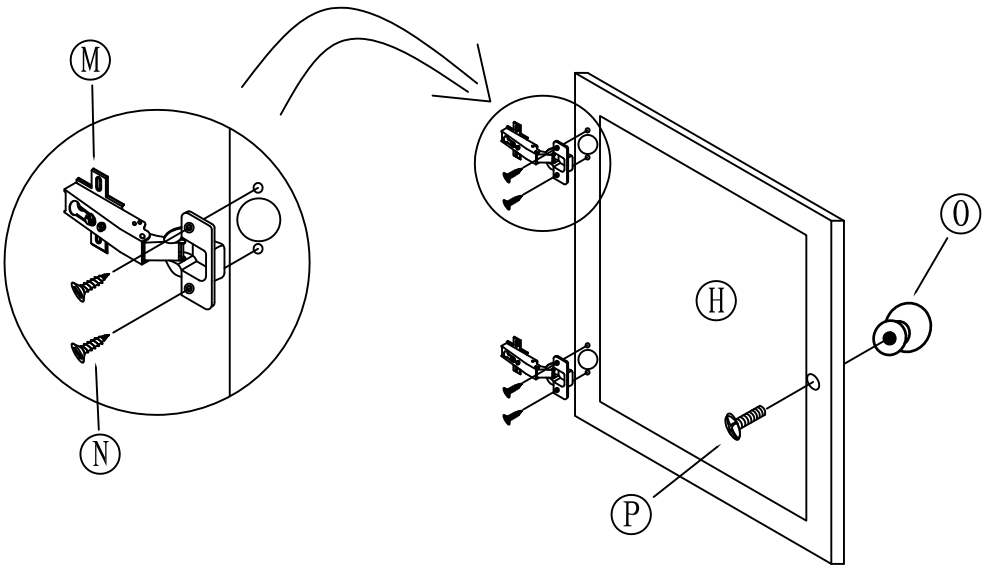

5). ASSEMBLE THE DOOR(H).

- ATTACH THE HANDLE(O) TO DOOR(H) USING 1 SCREW(P).
- ATTACH 2 HINGES(M) TO DOOR(H) USING 4 SCREWS(N).

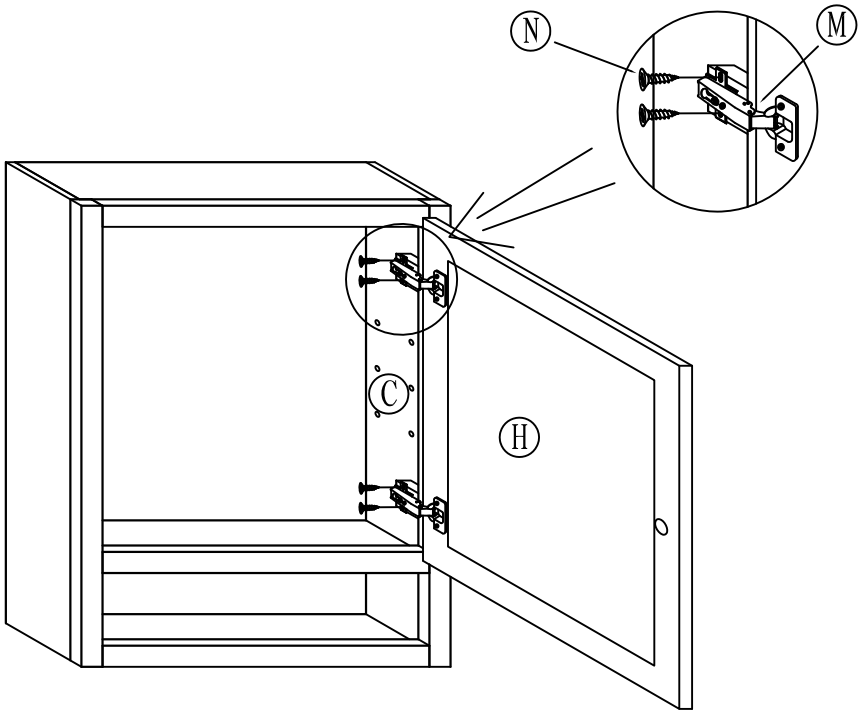

6). ASSEMBLE THE DOOR(H).

- ATTACH THE DOOR(H) TO RIGHT SIDE PANEL(C) USING 4 SCREWS(N).

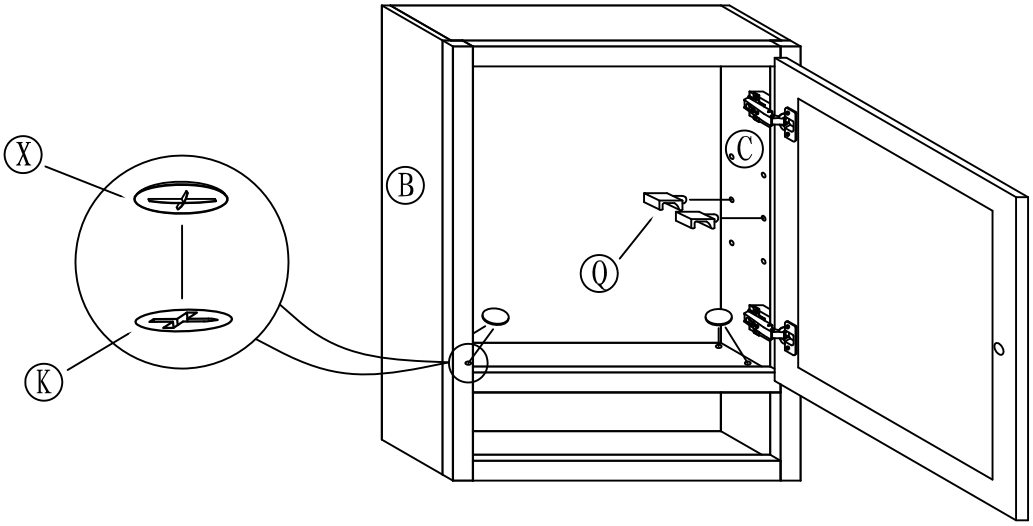

7). ASSEMBLE THE SHELF SUPPORTS(Q) AND CAM-LOCK CAPS(X).

- INSERT 4 SHELF SUPPORTS(Q) INTO THE HOLES IN THE SIDE PANEL(B/C).
- ATTACH THE CAM-LOCKS(K) USING 4 CAM-LOCK CAPS(X).

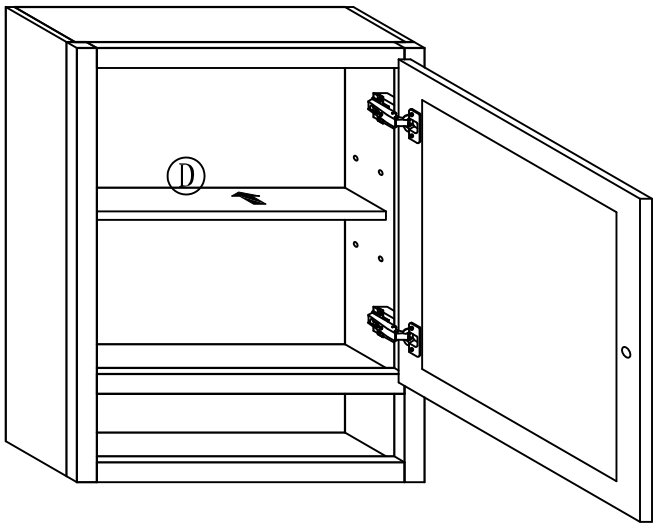

8). ASSEMBLE THE SHELF(D).

- PUT THE SHELF(D) ONTO THE SHELF SUPPORTS(Q).

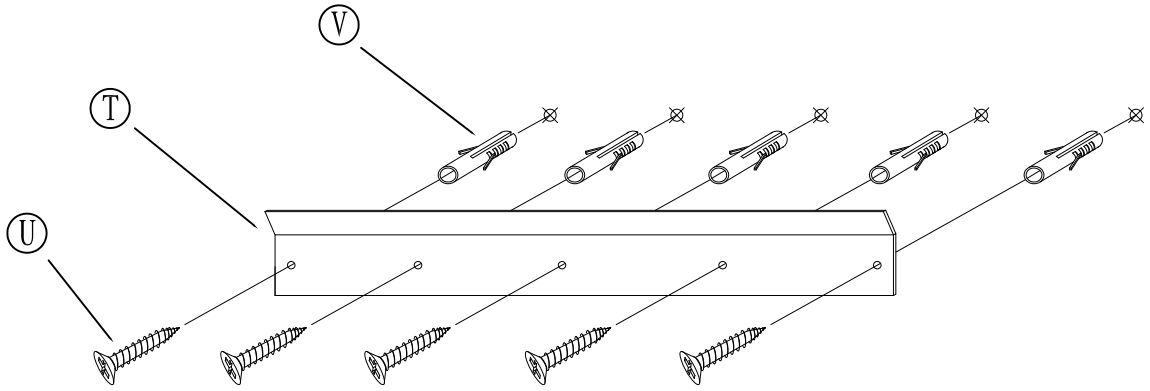

WALL

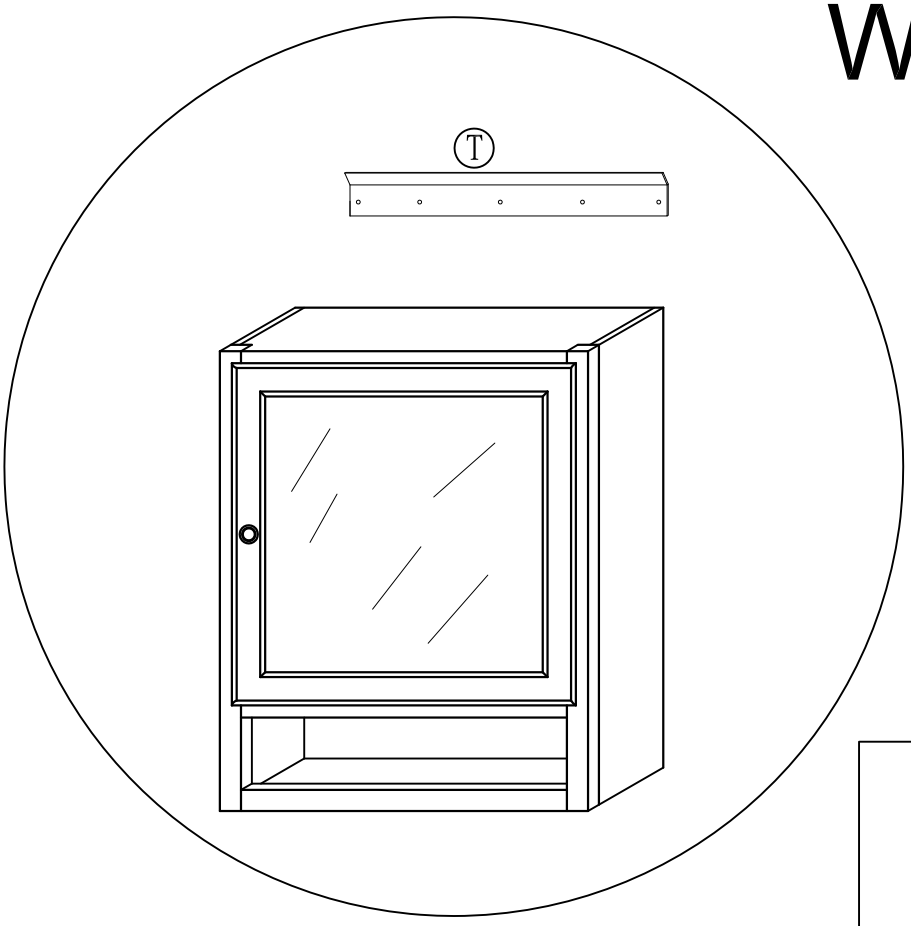

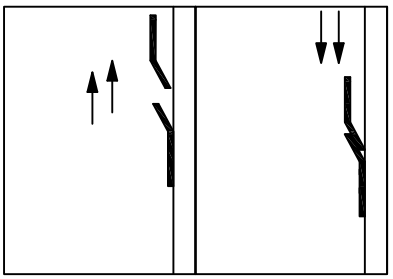

9). ASSEMBLE THE SHEETIRON(T).

- DRILL 5 HOLES INTO THE WALL, PLEASE REFER TO THE REAR BACK PANEL'S HOLE DISTANCE AND HEIGHT.
- TAP 5 GECKOS(V) INTO THE HOLES ON THE WALL. THEN ROTATE 5 SCREWS(U) INTO THE GECKOS(V).
- HANG THE CABINET ONTO THE SHEETIRON(T).